Wall Mounted Touch Panel

Model No.: T20. T20-1. T20-2. T20-3

1-4 Zone dimming switch/Glass touch panel/Wireless remote 30m distance/AAA \times 2 battery



Features

C€ RoHS emc LVD RED

- Touch panel 1/2/3/4 zone dimming switch RF remote.
- Each zone can remote control multiple Skydance's 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel.
- Touch keys with chord tones and LED indicator.
- Free installation, no wiring, removable.
- AAA x 2 battery powered.
- White & Black glass panel available.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAA x 2)
Working current	<5mA
Standby current	< 20µA
Standby time	1 year
Remote distance	30m

 
Environment	
Operation temperature	Ta: -30°C ~ +55°C
Case temperature (Max.)	Tc:+65°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Warranty		
Warranty	5 years	
Weight		


Weight 160g Gross weight 190g

Mechanical Structures and Installations



Installation diagram:

 Typical base as below:





European style




86 size

To fix the panel, two options are offered for selection:

Option 1: fix it on the wall with two screws.

Option 2: adhere it to the wall with paster.

 Key function



■ ON key

Short press: Turn on the light of each zone. Long press(1-6s): Dimming up when light is on.

0 - OFF key

Short press: Turn off the light of each zone.

Long press(1-6s): Dimming down when light is on.

Long press(5s): Turn on or turn off tone when light is off.

User Manual Ver 1.0.7

Touch Panel work as RF remote (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

اادو	the	contro	ler's	Match	key

Match:

Short press match key, immediately press ON key of the touch panel.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match.
The LED indicator fast flash a few times
means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press ON key 3 times on the touch panel. The light blinks 3 times means match is successful.

Delete

Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press ON key 5 times on the touch panel.

The light blinks 5 times means all matched remotes were deleted.

Safety information

- $1. \ \ Read \ all \ instructions \ carefully \ before \ you \ begin \ this \ installation.$
- ${\bf 2. \ \ When \ installing \ battery, \ pay \ attention \ to \ the \ battery \ positive \ and \ negative \ polarity.}$
 - A long time without the remote control, remove the battery.
 - When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.0.7