4 Channel Constant Voltage Power Repeater

Model No.: EV4

4 Channel/PWM signal input/Constant voltage output/3KV optoelectronic isolation



CE RoHS emc LVD

Features

- 12-36V constant voltage power repeater.
- 4 channel, 5A per channel.
- To receive PWM signal control.
- Power repeater in series or in parallel to expand output unlimitedly.
- Apply to single color, dual color, RGB or RGBW constant voltage LED strip or module.

Technical Parameters

Input and Output		
Input voltage	12-36VDC	
Input current	20.5A	
Input signal	PVVM	
Output voltage	4 x (12-36)VDC	
Output current	4CH,5A/CH	
Output power	4 x (60-180)W	
Output type	Constant voltage	


Environment	
Operation temperature	Ta:-30°C ~ +55°C
Case temperature (Max.)	Tc:+85°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Certification	CE,EMC,LVD

Warranty and Protection		
Warranty	5 years	
Protection	Reverse Polarity	


Weight	
Net weight	O.120kg
Gross weight	0.140kg

Mechanical Structures and Installations

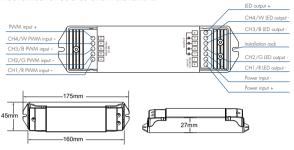


Wiring Diagram

• Parallel connection

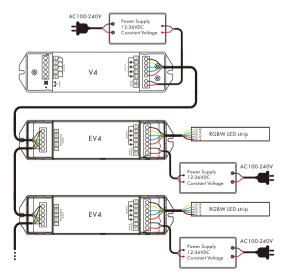

User Manual Ver 1.0.3

Series connection

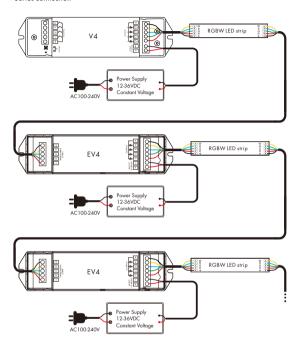

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	No power. Wrong connection or insecure.	Check the power. Check the connection.
Wrong color	1. Wrong connection of R/G/B/W wires.	1. Reconnect R/G/B/W wires.
Uneven intensity between front and rear, with voltage drop	Output cable is too long. Wire diameter is too small. Overload beyond power supply capability. Overload beyond controller capability.	Reduce cable or loop supply. Change wider wire. Replace higher power supply. Add power repeater.

Safety & Warnings

- 1. The product shall be installed and serviced by a qualified person.
- 2. This product is non-waterproof. Please avoid the sun and rain.
- 3. Good heat dissipation will prolong the working life of the controller, Please ensure good ventilation.
- 4. Please check if the output voltage of any power supplies used comply with the working voltage of the product.
- 5. Ensure all wire connections and polarities are correct and secure before applying power to avoid any damages to the LED lights.
- 6. If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.

User Manual Ver 1.0.3