RF wireless LED remote controller Model:LC-2819S-DIM with LC-1009Fxx





• Receivers work with WIFI-RF converter to be controlled by smart phone











Parameter


Remote


Part No.	Operation Voltage	Operation Frequency	DIMENSIONS ø/h (mm)	Remarks
LC-2819S-DIM	3.6VDC	434MHz/868MHz	55x120x17	load 3pcs 7 AAA (1.5V) batteries

Receiver


Part No.	luput Voltage	Current	Output	Remarks
LC-1009FA	12-36VDC	4x5A	4x(60-180)W	Constant voltage
LC-1009EA	12-36VDC	4x8A	4x(96-288)W	Constant voltage
LC-1009FA3	12-36VDC	4x350mA	4x(4.2-12.6)W	Constant current
LC-1009FA7	12-36VDC	4x700mA	4x(8.4-25.2)W	Constant current

Product Size

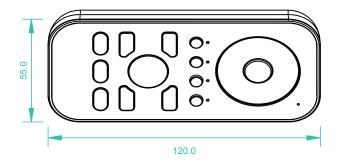

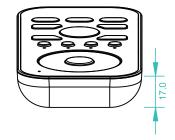



Briefintroduction of buttons

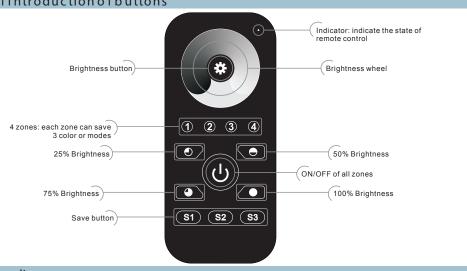

Wiring diagram


1)Receiver Connection Diagram for Single Unit

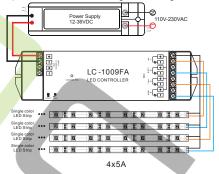

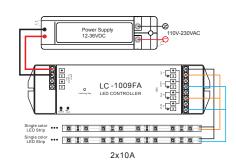

2)Receiver Connection Diagram for Multiple Units

4x5A

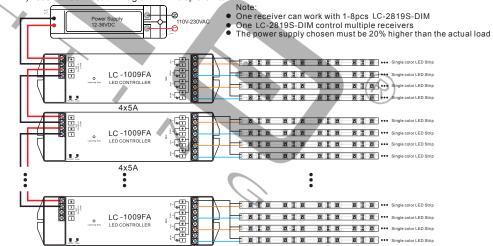

Operation

Learning (matching)

- a. Do wiring according to connection diagram
- b. Wake up the remote control by touching ON/OFF button.
- c. Press learning button on receiver.
- d. Touch any zone button on remote control.
- e. Then touch brightness wheel.
- f. Connected LED light will blink to confirm zone designation.
- q. Press at learning button on receiver over 5 seconds until LED light flash, then delete the learned ID.

Note 1: Tochooseam asterfroms laves by jumperfore ach zone.

Short circuit for master.

Open circuit for s lave.

Each zone only can set on emaster controller. After a period of time, the master will dos ynchronization operation to keep the same color or mode of all slaves in one zone.

Note 2: Each remote control 4 zones (areas) receivers, each area can belearned as many receivers as we can.

Each receiver maximally can be controlled by 8 different remote controllers.

Dim w heel

Choose zone number 1 2 3 4, for example, 1 and 3, then touch , choose the brightness you want, zone 1 and 3 will indicate corresponding brightness as we touched.

Brightness Up & Down Button

Long Press button to dim down/up brightness, the dimming direction will change every time after pressing switch. For example, the first long press is brightness up, it will be dimmed down when long press again.

Brightnesslevel button

Select zone from 1 2 3 4 . Press 0 , the corresponding zones will be 25% brightness. Press the corresponding zones will be 50% brightness. Press the corresponding zones will be 50% brightness. Press the corresponding zones will be 75% brightness. Press the corresponding zones will be 100% brightness.

Saveandrecallbutton



b. Recall: select zone button which we want recall from 1 2 3 4 then short press save button \$1 \$2 \$3

Safety & W arnings

- 1) The product shall be installed and serviced by a qualified person.
- 2) IP20.Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- 3) Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6) Please ensure that the cable is secured tightly in the connector
- 7) For update information please consult your supplier.

Warranty Agreement

- 1) We provide lifelong technical assistance with this product:
- 3-year warranty. We print date on every products, for example :1125 means year 2011, week 25. The warranty is for free repair or replacement and covers manufacturing faults only.
- For faults beyond the 3-year warranty we reserve the right to charge for time and parts.
- 2) Limited Warrenty
- Any defects caused by wrong operation.
- Any damages caused by unauthorized removal, maintenance, modifying, incorrect connection and replacement of chips.
- Any damages due to transportation, vibration etc. after purchase.
- Any damages caused by earthquake, fire, lightning, pollution and abnormal voltage.
- Any damages caused by negligence, inappropriate storing at high temperatures and humidity or near harmful chemicals.
- Product has been updated
- 3) Repair or replacement as provided under this warranty is the exclusive remedy to the customer.

